


Need a sanitary permit in order to
obtain a building permit per
Wis. Stats. 145.195

*Applies to all townships (zoned & not zoned)


Vacant Lot

- Soil Test
- System Design
- State/County Plan Review
- County Issues State Sanitary Permit
- System Installation
- ***Process may take months**

Soil

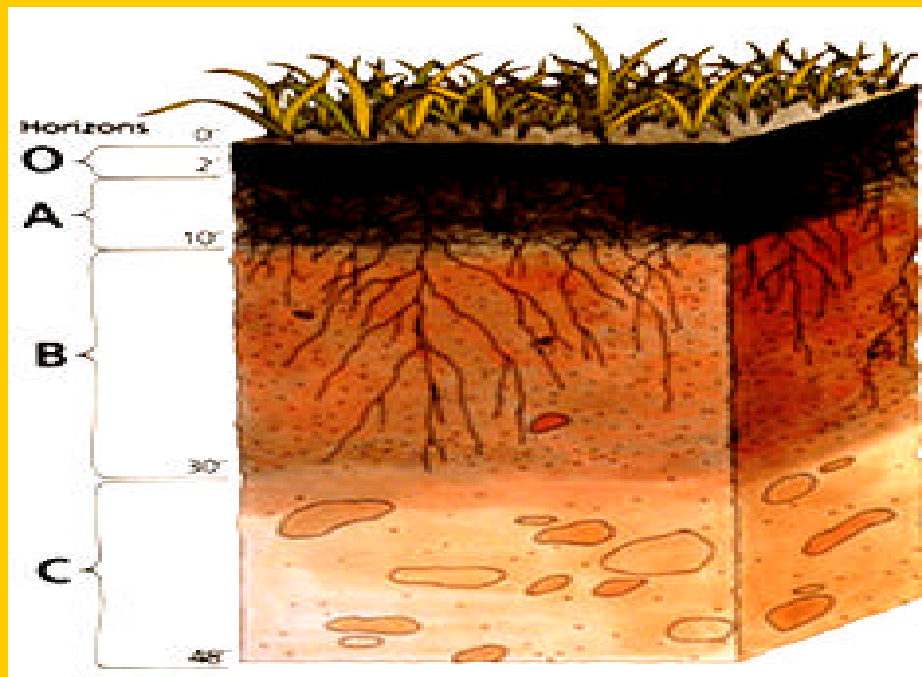

Vertical Separation Concept

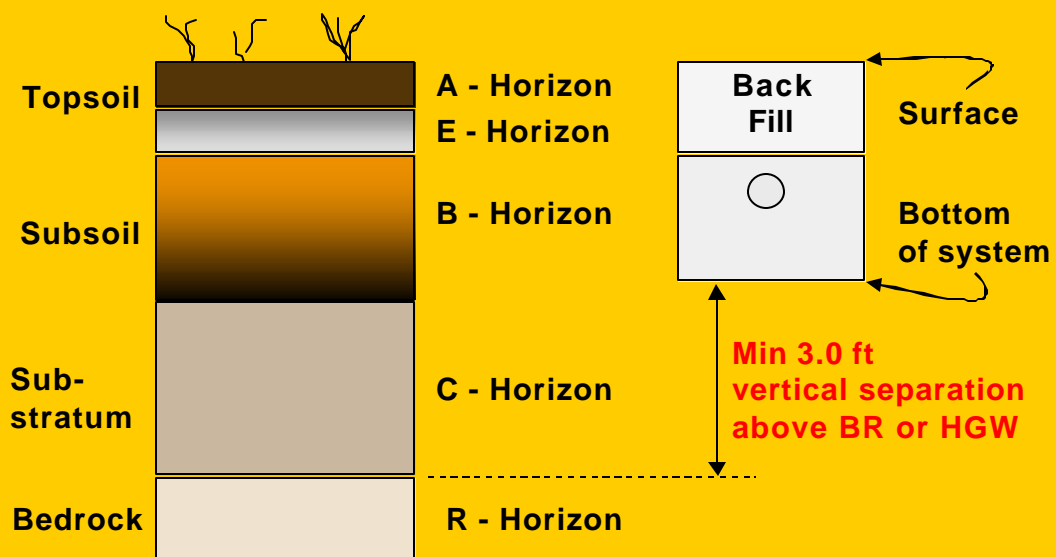

Suitable Soil Depth & System Type

- >48 inches = In-Ground/Conventional
- 36 - <48 inches = At-Grade
- ~6 - <36 inches = Mound
- <~6 inches = Holding Tank
- *ATU may be used with any drainfield

Soil Boring



More Soil

